

# VOLUME TWO:

# TABLE OF CONTENTS

---



## Chapter 6: Drum Instruction Programming

<b>DL05 Drum Introduction</b> .....	<b>6-2</b>
Purpose .....	6-2
Drum Terminology .....	6-2
Drum Chart Representation .....	6-3
Output Sequences .....	6-3
<b>Step Transitions</b> .....	<b>6-4</b>
Drum Instruction Types .....	6-4
Timer-Only Transitions .....	6-4
Timer and Event Transitions .....	6-5
Event-Only Transitions .....	6-6
Counter Assignments .....	6-6
Last Step Completion .....	6-7
<b>Overview of Drum Operation</b> .....	<b>6-8</b>
Drum Instruction Block Diagram .....	6-8
Powerup State of Drum Registers .....	6-9
<b>Drum Control Techniques</b> .....	<b>6-10</b>
Drum Control Inputs .....	6-10
Self-Resetting Drum .....	6-11
Initializing Drum Outputs .....	6-11
Using Complex Event Step Transitions .....	6-11
<b>Drum Instruction</b> .....	<b>6-12</b>
Timed Drum with Discrete Outputs (DRUM) .....	6-12
<b>Event Drum (EDRUM) Instruction</b> .....	<b>6-14</b>
Program Using the Handheld Programmer .....	6-16

## Chapter 7: RLL<sup>PLUS</sup> Stage Programming

<b>Introduction to Stage Programming</b> .....	7-2
Overcoming “Stage Fright” .....	7-2
<b>Learning to Draw State Transition Diagrams</b> .....	7-3
Introduction to Process States .....	7-3
The Need for State Diagrams .....	7-3
A 2-State Process .....	7-3
RLL Equivalent .....	7-4
Stage Equivalent .....	7-4
Let’s Compare .....	7-5
Initial Stages .....	7-5
What Stage Bits Do .....	7-6
Stage Instruction Characteristics .....	7-6
<b>Using the Stage Jump Instruction for State Transitions</b> .....	7-7
Stage Jump, Set, and Reset Instructions .....	7-7
<b>Stage Program Example: Toggle On/Off Lamp Controller</b> .....	7-8
A 4-State Process .....	7-8
<b>Four Steps to Writing a Stage Program</b> .....	7-9
<b>Stage Program Example: A Garage Door Opener</b> .....	7-10
Garage Door Opener Example .....	7-10
Draw the Block Diagram .....	7-10
Draw the State Diagram .....	7-11
Add Safety Light Feature .....	7-12
Modify the Block Diagram and State Diagram .....	7-12
Using a Timer Inside a Stage .....	7-13
Add Emergency Stop Feature .....	7-14
Exclusive Transitions .....	7-14
<b>Stage Program Design Considerations</b> .....	7-15
Stage Program Organization .....	7-15
How Instructions Work Inside Stages .....	7-16
Using a Stage as a Supervisory Process .....	7-17
Stage Counter .....	7-17
Power Flow Transition Technique .....	7-18
Stage View in <i>DirectSOFT 5</i> .....	7-18

<b>Parallel Processing Concepts</b> .....	<b>7-19</b>
Parallel Processes .....	7-19
Converging Processes .....	7-19
Convergence Stages (CV) .....	7-19
Convergence Jump (CVJMP) .....	7-20
Convergence Stage Guidelines .....	7-20
<b>RLL<sup>PLUS</sup> (Stage) Instructions</b> .....	<b>7-21</b>
Stage (SG) .....	7-21
Initial Stage (ISG) .....	7-22
JUMP (JMP) .....	7-22
Not Jump (NJMP) .....	7-22
Converge Stage (CV) and Converge Jump (CVJMP) .....	7-23
<b>Questions and Answers about Stage Programming</b> .....	<b>7-25</b>

## Chapter 8: PID Loop Operation

<b>DL05 PID Control</b> .....	<b>8-2</b>
DL05 PID Control Features .....	8-2
<b>Introduction to PID Control</b> .....	<b>8-4</b>
What is PID Control? .....	8-4
<b>Introducing DL05 PID Control</b> .....	<b>8-6</b>
Process Control Definitions .....	8-8
<b>PID Loop Operation</b> .....	<b>8-9</b>
Position Form of the PID Equation .....	8-9
Reset Windup Protection .....	8-10
Freeze Bias .....	8-11
Adjusting the Bias .....	8-11
Step Bias Proportional to Step Change in SP .....	8-12
Eliminating Proportional, Integral or Derivative Action .....	8-12
Velocity Form of the PID Equation .....	8-12
Bumpless Transfer .....	8-13
Loop Alarms .....	8-13
Loop Operating Modes .....	8-14
Special Loop Calculations .....	8-14
<b>Ten Steps to Successful Process Control</b> .....	<b>8-16</b>

<b>PID Loop Setup</b> .....	<b>8-18</b>
Some Things to Do and Know Before Starting .....	8-18
PID Error Flags .....	8-18
Establishing the Loop Table Size and Location .....	8-18
Loop Table Word Definitions .....	8-20
PID Mode Setting 1 Bit Descriptions (Addr + 00) .....	8-21
PID Mode Setting 2 Bit Descriptions (Addr + 01) .....	8-22
Mode/Alarm Monitoring Word (Addr + 06) .....	8-23
Ramp/Soak Table Flags (Addr + 33) .....	8-23
Ramp/Soak Table Location (Addr + 34) .....	8-24
Ramp/Soak Table Programming Error Flags (Addr + 35) .....	8-24
Configure the PID Loop .....	8-25
<b>PID Loop Tuning</b> .....	<b>8-40</b>
Open-Loop Test .....	8-40
Manual Tuning Procedure .....	8-41
Auto Tuning Procedure .....	8-44
Use <i>DirectSOFT</i> 5 Data View with PID View .....	8-48
Open a New Data View Window .....	8-48
Open PID View .....	8-49
<b>Using the Special PID Features</b> .....	<b>8-51</b>
How to Change Loop Modes .....	8-51
Operator Panel Control of PID Modes .....	8-52
PLC Modes Effect on Loop Modes .....	8-52
Loop Mode Override .....	8-52
PV Analog Filter .....	8-53
Creating an Analog Filter in Ladder Logic .....	8-54
Use the <i>DirectSOFT</i> 5 Filter Intelligent Box Instruction .....	8-55
FilterB Example .....	8-55
<b>Ramp/Soak Generator</b> .....	<b>8-56</b>
Introduction .....	8-56
Ramp/Soak Table .....	8-57
Ramp/Soak Table Flags .....	8-59
Ramp/Soak Generator Enable .....	8-59
Ramp/Soak Controls .....	8-59
Ramp/Soak Profile Monitoring .....	8-60

## Table of Contents

---

Ramp/Soak Programming Errors .....	8-60
Testing Your Ramp/Soak Profile .....	8-60
<b>DirectSOFT 5 Ramp/Soak Example .....</b>	<b>8-61</b>
Setup the Profile in PID Setup .....	8-61
Program the Ramp/Soak Control in Relay Ladder .....	8-61
Test the Profile .....	8-62
<b>Cascade Control .....</b>	<b>8-63</b>
Introduction .....	8-63
Cascaded Loops in the DL05 CPU .....	8-64
Tuning Cascaded Loops .....	8-65
<b>Time-Proportioning Control .....</b>	<b>8-66</b>
On/Off Control Program Example .....	8-67
<b>Feedforward Control .....</b>	<b>8-68</b>
Feedforward Example .....	8-69
<b>PID Example Program .....</b>	<b>8-70</b>
Program Setup for the PID Loop .....	8-70
<b>Troubleshooting Tips .....</b>	<b>8-72</b>
<b>Glossary of PID Loop Terminology .....</b>	<b>8-74</b>
<b>Bibliography .....</b>	<b>8-76</b>

## Chapter 9: Maintenance and Troubleshooting

<b>Hardware System Maintenance .....</b>	<b>9-2</b>
Standard Maintenance .....	9-2
<b>Diagnostics .....</b>	<b>9-2</b>
Diagnostics .....	9-2
Fatal Errors .....	9-2
Non-fatal Errors .....	9-2
V-memory Error Code Locations .....	9-3
Special Relays (SP) Corresponding to Error Codes .....	9-3
DL05 Micro PLC Error Codes .....	9-4
Program Error Codes .....	9-5
<b>CPU Indicators .....</b>	<b>9-6</b>
RUN Indicator .....	9-7

CPU Indicator .....	9-7
<b>Communications Problems .....</b>	<b>9-7</b>
<b>I/O Point Troubleshooting .....</b>	<b>9-8</b>
Possible Causes .....	9-8
Some Quick Steps .....	9-8
Handheld Programmer Keystrokes Used to Test an Output Point .....	9-9
<b>Noise Troubleshooting .....</b>	<b>9-10</b>
Electrical Noise Problems .....	9-10
Reducing Electrical Noise .....	9-10
<b>Machine Startup and Program Troubleshooting .....</b>	<b>9-11</b>
Syntax Check .....	9-11
Special Instructions .....	9-12
Duplicate Reference Check .....	9-13
Run Time Edits .....	9-14
Forcing I/O Points .....	9-16
Bit Forcing with Direct Access .....	9-16

## Chapter 10: Memory Cartridge/Real Time Clock

<b>General Information about the D0-01MC .....</b>	<b>10-2</b>
Jumper Selects Write Enable or Disable .....	10-2
Low Battery Alert .....	10-2
Clock/Calendar .....	10-2
Specifications .....	10-2
New Ladder Instructions .....	10-2
Error Code Changes .....	10-2
<b>Setting the Write Enable/Disable Jumper .....</b>	<b>10-3</b>
Write Enable .....	10-3
Write Disable .....	10-3
<b>Plugging-in the Memory Cartridge .....</b>	<b>10-4</b>
Remove the Slot Cover .....	10-4
Insert the Memory Cartridge .....	10-4
<b>Software and Firmware Requirements .....</b>	<b>10-5</b>
How to Update Your <i>DirectSOFT</i> Programming Software .....	10-5
How to Update Your DL05 Firmware .....	10-5

## Table of Contents

---

<b>Naming the Memory Cartridge</b> .....	<b>10-6</b>
Up to 8 Alphanumeric Characters .....	10-6
Name is Retained in Cartridge Memory and Project Folder .....	10-6
<b>Setting the Time and Date</b> .....	<b>10-7</b>
<b>Memory Transfers</b> .....	<b>10-8</b>
CPU to MC .....	10-8
MC to CPU .....	10-8
<b>LED Indicator Lights</b> .....	<b>10-9</b>
<b>Password Protected Programs</b> .....	<b>10-9</b>
<b>Memory Map and Forwarding Range</b> .....	<b>10-10</b>
<b>Battery Back-up During AC Power Loss</b> .....	<b>10-11</b>
What if the Battery Dies? .....	10-11
Battery Type .....	10-11
Removing and Replacing the Battery .....	10-11
<b>Specifications and Agency Approvals</b> .....	<b>10-12</b>
<b>Clock/Calendar Instructions</b> .....	<b>10-13</b>
Date (DATE) .....	10-13
Time (TIME) .....	10-14
Move Memory Cartridge / Load Label (MOVMC) (LDLBL) .....	10-15
Copy Data From a Data Label Area to V-memory .....	10-16
Copy Data From V-memory to a Data Label Area .....	10-17
<b>Error Codes</b> .....	<b>10-18</b>

## Appendix A: Auxiliary Functions

<b>Introduction</b> .....	<b>A-2</b>
Purpose of Auxiliary Functions .....	A-2
Accessing AUX Functions via <i>DirectSOFT 5</i> .....	A-3
Accessing AUX Functions via the Handheld Programmer .....	A-3
<b>AUX 2* — RLL Operations</b> .....	<b>A-4</b>
AUX 21 Check Program .....	A-4
AUX 22 Change Reference .....	A-4
AUX 23 Clear Ladder Range .....	A-4
AUX 24 Clear Ladders .....	A-4

<b>AUX 3* — V-memory Operations</b> .....	<b>A-4</b>
AUX 31 Clear V-Memory .....	A-4
<b>AUX 4* — I/O Configuration</b> .....	<b>A-5</b>
AUX 41 Show I/O Configuration .....	A-5
<b>AUX 5* — CPU Configuration</b> .....	<b>A-5</b>
AUX 51 Modify Program Name .....	A-5
AUX 53 Display Scan Time .....	A-5
AUX 54 Initialize Scratchpad .....	A-5
AUX 55 Set Watchdog Timer .....	A-5
AUX 56 CPU Network Address .....	A-6
AUX 57 Set Retentive Ranges .....	A-6
AUX 58 Test Operations .....	A-6
AUX 59 Bit Override .....	A-7
AUX 5B Counter Interface Configuration .....	A-7
AUX 5D Select PLC Scan Mode .....	A-7
<b>AUX 6* — Handheld Programmer Configuration</b> .....	<b>A-8</b>
AUX 61 Show Revision Numbers .....	A-8
AUX 62 Beeper On/Off .....	A-8
AUX 65 Run Self Diagnostics .....	A-8
<b>AUX 7* — EEPROM Operations</b> .....	<b>A-8</b>
Transferrable Memory Areas .....	A-8
AUX 71 CPU to HPP EEPROM .....	A-8
AUX 72 HPP EEPROM to CPU .....	A-9
AUX 73 Compare HPP EEPROM to CPU .....	A-9
AUX 74 HPP EEPROM Blank Check .....	A-9
AUX 75 Erase HPP EEPROM .....	A-9
AUX 76 Show EEPROM Type .....	A-9
<b>AUX 8* — Password Operations</b> .....	<b>A-9</b>
AUX 81 Modify Password .....	A-9
AUX 82 Unlock CPU .....	A-10
AUX 83 Lock CPU .....	A-10

## Appendix B: DL05 Error Codes

<b>DL05 Error Codes</b> .....	<b>B-2</b>
-------------------------------	------------



### Appendix C: Instruction Execution Times

<b>Introduction</b> .....	<b>C-2</b>
V-memory Data Registers .....	C-2
V-memory Bit Registers .....	C-2
How to Read the Tables .....	C-2
<b>Instruction Execution Times</b> .....	<b>C-3</b>
Boolean Instructions .....	C-3
Comparative Boolean Instructions .....	C-4
Immediate Instructions .....	C-10
Timer, Counter and Shift Register .....	C-10
Accumulator Data Instructions .....	C-11
Logical Instructions .....	C-12
Math Instructions .....	C-12
Bit Instructions .....	C-14
Number Conversion Instructions .....	C-14
Table Instructions .....	C-14
CPU Control Instructions .....	C-15
Program Control Instructions .....	C-15
Interrupt Instructions .....	C-15
Network Instructions .....	C-15
Message Instructions .....	C-16
RLL <sup>PLUS</sup> Instructions .....	C-16
Drum Instructions .....	C-16
Word Bit Instructions .....	C-17

### Appendix D: Special Relays

<b>DL05 PLC Special Relays</b> .....	<b>D-2</b>
--------------------------------------	------------

### Appendix E: High-speed Input and Pulse Output Features

<b>Introduction</b> .....	<b>E-2</b>
Built-in Motion Control Solution .....	E-2
Availability of HSIO Features .....	E-2
Dedicated High-Speed I/O Circuit .....	E-3
Wiring Diagrams for Each HSIO Mode .....	E-3

<b>Choosing the HSIO Operating Mode</b> .....	<b>E-4</b>
Understanding the Six Modes .....	E-4
Default Mode .....	E-4
Configuring the HSIO Mode .....	E-5
Configuring Inputs X0 – X2 .....	E-5
<b>Mode 10: High-Speed Counter</b> .....	<b>E-6</b>
Purpose .....	E-6
Functional Block Diagram .....	E-6
Wiring Diagram .....	E-7
Interfacing to Counter Inputs .....	E-7
Interfacing to Counter Outputs .....	E-7
Setup for Mode 10 .....	E-8
Presets and Special Relays .....	E-8
Preset Data Starting Location .....	E-9
Using Fewer than 24 Presets .....	E-9
Equal Relay Numbers .....	E-9
Calculating Your Preset Values .....	E-10
X Input Configuration .....	E-10
Writing Your Control Program .....	E-11
Program Example: Counter Without Preset .....	E-12
Counter With Presets Program Example .....	E-14
Counter With Preload Program Example .....	E-16
Troubleshooting Guide for Mode 10 .....	E-17
Symptom: The counter does not count. ....	E-17
Symptom: The counter counts but the presets do not function. ....	E-17
Symptom: The counter counts up but will not reset. ....	E-17
<b>Mode 20: Quadrature Counter</b> .....	<b>E-18</b>
Purpose .....	E-18
Functional Block Diagram .....	E-18
Quadrature Encoder Signals .....	E-18
Wiring Diagram .....	E-19
Interfacing to Encoder Outputs .....	E-19
Setup for Mode 20 .....	E-20
X Input Configuration .....	E-20
Writing Your Control Program .....	E-21

## Table of Contents

---

Quadrature Counter w/Preload Program Example .....	E-21
Counter Preload Program Example .....	E-23
Troubleshooting Guide for HSIO Mode 20 .....	E-23
Symptom: The counter does not count. ....	E-23
Symptom: The counter counts in the wrong direction .....	E-23
Symptom: The counter counts up and down but will not reset. ....	E-23
<b>Mode 30: Pulse Output .....</b>	<b>E-24</b>
Purpose .....	E-24
Functional Block Diagram .....	E-25
Wiring Diagram .....	E-26
Interfacing to Drive Inputs .....	E-26
Motion Control Profile Specifications .....	E-27
Physical I/O Configuration .....	E-27
Logical I/O Functions .....	E-27
Setup for Mode 30 .....	E-28
Profile / Velocity Select Register .....	E-28
Profile Parameter Table .....	E-29
Trapezoidal Profile .....	E-29
Registration Profile .....	E-29
Velocity Profile .....	E-29
Choosing the Profile Type .....	E-30
Trapezoidal Profile Defined .....	E-30
Registration and Home Search Profiles Defined .....	E-30
Velocity Profile Defined .....	E-30
<b>Trapezoidal Profile Operation .....</b>	<b>E-31</b>
Trapezoidal Profile Applications .....	E-31
Trapezoidal Profile Program Example .....	E-32
Preload Position Value .....	E-33
<b>Registration Profile Operation .....</b>	<b>E-34</b>
Registration Applications .....	E-34
Registration Profile Program Example .....	E-35
Home Search Program Example .....	E-37
<b>Velocity Profile Operation .....</b>	<b>E-39</b>
Velocity Profile Applications .....	E-39
Velocity Profile Program Example .....	E-40

Pulse Output Error Codes .....	E-42
Troubleshooting Guide for HSIO Mode 30 .....	E-42
Symptom: The stepper motor does not rotate. ....	E-42
Symptom: The motor turns in the wrong direction. ....	E-43
<b>Mode 40: High-Speed Interrupts .....</b>	<b>E-44</b>
Purpose .....	E-44
Functional Block Diagram .....	E-44
Setup for Mode 40 .....	E-45
Interrupts and the Ladder Program .....	E-45
External Interrupt Timing Parameters .....	E-46
Timed Interrupt Parameters .....	E-46
X Input/Timed INT Configuration .....	E-46
Independent Timed Interrupt .....	E-46
External Interrupt Program Example .....	E-47
Timed Interrupt Program Example .....	E-48
<b>Mode 50: Pulse Catch Input .....</b>	<b>E-49</b>
Purpose .....	E-49
Functional Block Diagram .....	E-49
Pulse Catch Timing Parameters .....	E-49
Setup for Mode 50 .....	E-50
X Input Configuration .....	E-50
Pulse Catch Program Example .....	E-51
<b>Mode 60: Discrete Inputs with Filter .....</b>	<b>E-52</b>
Purpose .....	E-52
Functional Block Diagram .....	E-52
Input Filter Timing Parameters .....	E-52
Setup for Mode 60 .....	E-53
X Input Configuration .....	E-53
Filtered Inputs Program Example .....	E-54

## Appendix F: PLC Memory

<b>DL05 PLC Memory .....</b>	<b>F-2</b>
Non-volatile V-memory in the DL05 .....	F-3

## Appendix G: ASCII Table

ASCII Table .....G-2

## Appendix H: Product Weights

Product Weight Table .....H-2

## Appendix I: Numbering Systems

Introduction .....I-2  
Binary Numbering System .....I-2  
Hexadecimal Numbering System .....I-3  
Octal Numbering System .....I-4  
Binary Coded Decimal (BCD) Numbering System .....I-5  
Real (Floating Point) Numbering System .....I-5  
BCD/Binary/Decimal/Hex/Octal -What is the Difference? .....I-6  
Data Type Mismatch .....I-7  
Signed vs. Unsigned Integers .....I-8  
AutomationDirect.com Products and Data Types .....I-9  
    *Direct*LOGIC PLCs .....I-9  
    C-more/C-more Micro-Graphic Panels .....I-9

## Appendix J: European Union Directives (CE)

European Union (EU) Directives .....J-2  
    Member Countries .....J-2  
    Applicable Directives .....J-2  
    Compliance .....J-2  
    General Safety .....J-3  
    Special Installation Manual .....J-4  
    Other Sources of Information .....J-4  
Basic EMC Installation Guidelines .....J-5  
    Enclosures .....J-5  
    AC Mains Filters .....J-5  
    Suppression and Fusing .....J-5

Internal Enclosure Grounding . . . . .	J-6
Equi-potential Grounding . . . . .	J-6
Communications and Shielded Cables . . . . .	J-6
Analog and RS232 Cables . . . . .	J-7
Multidrop Cables . . . . .	J-7
Shielded Cables within Enclosures . . . . .	J-8
Analog Modules and RF Interference . . . . .	J-8
Network Isolation . . . . .	J-8
DC Powered Versions . . . . .	J-9
Items Specific to the DL05 . . . . .	J-9

## Appendix K: Introduction to Serial Communications

<b>Introduction to Serial Communications . . . . .</b>	<b>.K-2</b>
Wiring Standards . . . . .	K-2
Communications Protocols . . . . .	K-4
DL05 Port Specifications . . . . .	K-5
DL05 Port Pinouts . . . . .	K-5
Port Setup Using <i>DirectSOFT 5</i> or Ladder Logic Instructions . . . . .	K-6
Port 2 Setup for RLL Using K-Sequence, <i>DirectNET</i> or Modbus RTU . . . . .	K-7
Port 2 Setup for RLL Using ASCII . . . . .	K-8
K-Sequence Communications . . . . .	K-10
<i>DirectNET</i> Communications . . . . .	K-10
Step 1: Identify Master Port # and Slave # . . . . .	K-10
Step 2: Load Number of Bytes to Transfer . . . . .	K-10
Step 3: Specify Master Memory Area . . . . .	K-11
Step 4: Specify Slave Memory Area . . . . .	K-12
Communications from a Ladder Program . . . . .	K-13
Multiple Read and Write Interlocks . . . . .	K-13
Modbus RTU Communications . . . . .	K-14

## Index

Notes