Kramer Electronics, Ltd.



# **USER MANUAL**

# Model:

VP-4

1:4 VGA Distributor

# Contents

1	Introduction	1
2	Getting Started	1
3	Overview	2
4	Your VGA Distributor	2
5	Technical Specifications	3
Figur	es	
Figure 1	: VP-4 1:4 VGA Distributor	2
Table	S	
Table 1: VP-4 1:4 VGA Distributor Features Table 2: Technical Specifications of the VP-4 1:4 VGA Distributor		3 3

# 1 Introduction

Welcome to Kramer Electronics (since 1981): a world of unique, creative and affordable solutions to the infinite range of problems that confront the video, audio and presentation professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 350-plus different models now appear in 8 Groups<sup>1</sup>, which are clearly defined by function.

Congratulations on purchasing your Kramer **VP-4** *1:4 VGA Distributor*. This product is:

• Ideal for any professional system requiring high quality VGA distribution to multiple monitors/projectors

- Easily expandable to create larger systems
- Ideal as a multi-channel video DA for other signal formats via adapter cables

The package includes the following items:

- VP-4 1:4 VGA Distributor
- Power cord
- This user manual<sup>2</sup>

# 2 Getting Started

We recommend that you:

• Unpack the equipment carefully and save the original box and packaging materials for possible future shipment

- Review the contents of this user manual
- Use Kramer high performance high resolution cables<sup>3</sup>

GROUP 6: Accessories and Rack Adapters; GROUP 7: Scan Converters and Scalers; and GROUP 8: Cables and Connectors

<sup>3</sup> The complete list of Kramer cables is on our Web site at http://www.kramerelectronics.com



<sup>1</sup> GROUP 1: Distribution Amplifiers; GROUP 2: Video and Audio Switchers, Matrix Switchers and Controllers; GROUP 3: Video, Audio, VGA/XGA Processors; GROUP 4: Interfaces and Sync Processors; GROUP 5: Twisted Pair Interfaces;

<sup>2</sup> Download up-to-date Kramer user manuals from the Internet at this URL: http://www.kramerelectronics.com

# 3 Overview

Your high performance **VP-4** *1:4 VGA Distributor* is a 1:4 distribution amplifier for VGA signals. In particular, the **VP-4** *1:4 VGA Distributor*:

• Accepts a single VGA/SVGA/XGA input source and distributes it to 4 identical outputs using female 15pin HD connectors

• Includes an input and outputs that are DC coupled and provides buffering and isolation that conform to the highest standards

• With its video bandwidth of 350 MHz, ensures transparent operation even at high resolution VGA modes

Achieving the best performance means:

• Connecting only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)

• Avoiding interference from neighboring electrical appliances that may adversely influence signal quality and positioning your Kramer **VP-4** in a location free from moisture and away from excessive sunlight and dust

# 4 Your VGA Distributor

Figure 1 and Table 1 define the VP-4 1:4 VGA Distributor:

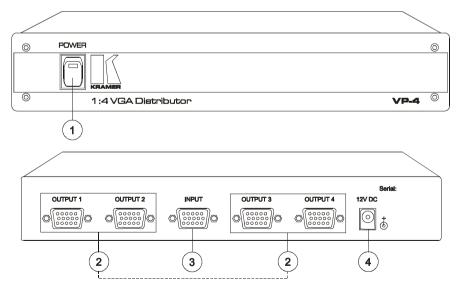


Figure 1: VP-4 1:4 VGA Distributor

#	Feature	Function
1	Power Switch	Illuminated switch supplying power to the unit
2	OUTPUT HD15F Connectors	Connect to the VGA/XGA acceptors (from 1 to 4)
3	INPUT HD15F Connector	Connects to the VGA/XGA source
4	12V DC	+12V DC connector for powering the unit

Table 1: VP-4 1:4 VGA Distributor Features

# **5** Technical Specifications

Table 2 includes the technical specifications:

Table 2: Technical Specifications of the VP-4 1:4 VGA Distributor

INPUTS:	1 VGA / XGA on a HD 15F connector
OUTPUTS:	4 VGA / XGA on HD 15F connectors
BANDWIDTH (-3dB):	350 MHz
DIFF. GAIN:	0.5%
DIFF. PHASE:	0.1 Deg.
S/N RATIO:	73dB
COUPLING:	AC, inputs and outputs, with input protection circuitry
POWER SOURCE:	12VDC, 75 mA
DIMENSIONS:	22cm x 18cm x 4.5cm (8.7" x 7" x 1.7"), W, D, H.
WEIGHT:	1.1 kg. (2.4 lbs.) approx.
ACCESSORIES:	12VDC power supply
OPTIONS:	19" rack adapters RK-80



#### LIMITED WARRANTY

Kramer Electronics (hereafter Kramer) warrants this product free from defects in material and workmanship under the following terms.

#### HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase.

#### WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

#### WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

- Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the web site www.kramerelectronics.com.
- 2. Any product, on which the serial number has been defaced, modified or removed.
- 3. Damage, deterioration or malfunction resulting from:
  - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
  - ii) Product modification, or failure to follow instructions supplied with the product
  - iii) Repair or attempted repair by anyone not authorized by Kramer
  - iv) Any shipment of the product (claims must be presented to the carrier)
  - v) Removal or installation of the product
  - vi) Any other cause, which does not relate to a product defect
  - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

#### WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

- 1. Removal or installations charges.
- Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
- 3. Shipping charges.

#### HOW YOU CAN GET WARRANTY SERVICE

- 1. To obtain service on you product, you must take or ship it prepaid to any authorized Kramer service center.
- Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
- 3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

#### LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

#### EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

- Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or:
- Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place. **NOTE:** All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has	been tested to determine compliance with the requirements of:
EN-50081:	"Electromagnetic compatibility (EMC);
	generic emission standard.
	Part 1: Residential, commercial and light industry"
EN-50082:	"Electromagnetic compatibility (EMC) generic immunity standard.
	Part 1: Residential, commercial and light industry environment".
CFR-47:	FCC Rules and Regulations:
	Part 15: "Radio frequency devices
	Subpart B – Unintentional radiators"

#### CAUTION!

- Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- ☑ Use the supplied DC power supply to feed power to the machine.
- Dease use recommended interconnection cables to connect the machine to other components.



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.



**Safety Warning:** Disconnect the unit from the power supply before opening/servicing.



CE

Kramer Electronics, Ltd. Web site: www.kramerelectronics.com E-mail: info@kramerel.com P/N: 2900-001027 REV 2