

 **WARNING**

UNINTENTIONAL EQUIPMENT OPERATION

To avoid improper handling of equipment:

The application of this product requires expertise in the design and programming of control systems. Only persons with such expertise should be allowed to program, install, alter, and apply this product.

Failure to observe this instruction can result in death or serious injury.

 **CAUTION**

EQUIPMENT DAMAGE HAZARD

To avoid improper handling of equipment:

1. Never remove this device while power is ON.
2. Do not subject to static discharge. This module contains electronic components that are very susceptible to damage from electrostatic discharge.

Failure to observe this instruction can result in equipment damage.

SY/MAX, SY/NET, SY/LINK, and SY/MATE are registered trademarks of Square D Company.
PASSPORT and IO/NET are trademarks of Square D Company.

© 1997 Schneider S.A. All rights reserved. This document may not be copied in whole or in part, or transferred to any other media, without the written permission of Schneider S.A.

Electrical equipment should be serviced only by qualified electrical maintenance personnel. No responsibility is assumed by Schneider S.A. for any consequences arising out of the use of this material.

DESCRIPTION

The TBX DMS1625 is a distributed input/output base unit containing eight 24 VDC inputs and digital relay outputs. This base unit may be coupled with a compatible communications interface to form a complete distributed block, which is well suited for the control of discrete field devices located some distance from a host programmable logic controller (PLC). The application of distributed I/O blocks saves installation and maintenance cost, as compared to direct wiring of field devices to a centralized I/O system over long distances.

The TBX DMS1625 base unit can be used with either SY/MAX[®] or Telemecanique PLCs, through the use of a compatible communications interface, or "top hat". The interface mounts directly on the base unit, and allows the PLC to read and write to the I/O points through a suitable control network. The Class 8030 Type CRM275 Distributed Remote IO/NET[™] Interface (DRIO) supports connection to the IO/NET control network as part of the PASSPORT[™] I/O System. The TBX LEP020 and TBX LEP030 communications interfaces support connection to the FIPIO network. The TBX CBS010 Expansion Interface allows inexpensive connection of a second TBX base unit to a single communications top hat.

The TBX DMS1625 base unit supports the following TBX I/O features:

- *Eight Input and Eight Relay Output Points* - Suitable for use with discrete field devices such as solenoids, contactors and pilot lights.
- *Output Fallback State Control* - Provides point-by-point control over output states when communication is lost.
- *24 VDC Logic Power Supply* - Converts to proper voltage levels for top hat and for on-board electronics; may be wired independently from input or output power supplies.
- *Removable Field Wiring Terminal Strip* - Mounts securely to the base unit without use of screws or fasteners.

This bulletin contains information on the installation and application of the TBX DMS1625 base unit with either SY/MAX or Telemecanique PLCs. For information about programming a SY/MAX PLC for use with the TBX DMS1625 base, refer to the Class 8030 Type CRM275 (DRIO) instruction bulletin (#30598-380). For information about programming a Telemecanique PLC for use with the TBX DMS1625 base, refer to the Telemecanique TBX Distributed I/O Modules manual (TSX DM TBXV52E). Please read and keep all the appropriate manuals close at hand when using TBX base units.

The top hats receive +24 VDC from the primary base, which the top hat converts to logic power for the top hat and base units. For additional information on the DRIO Interface and the Expansion Interface, refer to bulletins 30598-380 and 30598-371 respectively. You may use the TBX SUP10 power supply to provide 24 VDC for TBX bases and sensors from an AC source.

SPECIFICATIONS

Base Unit Power

Operating voltage: 24 VDC nominal; 19-30 VDC

Operating current at nominal voltage:

| Configuration | Nominal |
|------------------------------------|---------|
| Base only | 125 mA |
| Base with comms interface | 195 mA |
| Base, interface and expansion base | 310 mA |

Inputs

| | |
|---|--|
| Inputs per base unit | 8 |
| Number of input commons | 8 |
| Isolation rating | 1500 V rms between inputs and earth terminal |
| Voltage operating range | 24 VDC nominal; 19-30 VDC |
| Nominal input current draw | 15 mA |
| Must turn-on voltage | 11 VDC |
| Must turn-on current | 6mA |
| Must turn-off voltage | 5 VDC |
| Maximum turn-on time | 15 ms |
| Maximum turn-off time | 17 ms |
| Control input voltage monitor trip threshold | 18 VDC |
| I/O status indication | Visual indication provided by communications interface; 1 LED per input point |

Outputs

| | |
|-----------------------------|---|
| Outputs per base unit | 8 |
| Number of output commons | 4 |
| Isolation rating | 2000 V from contacts to rest of circuit |
| Voltage operating range | 24 VDC nominal (19-30 VDC); 24-240 VAC |
| Maximum output load ratings | |
| DC: Resistive | 24 W (0.3 x 10 ⁶ operations) |
| DC: Inductive (L/R = 60 ms) | 10 W (1 x 10 ⁶ operations) |

AC:

| Resistive | | |
|------------------|----------------|-------------------|
| Load | Voltage | Operations |
| 1 A | 110/220 | 0.2×10^6 |
| 0.5 A | 110/220 | 2×10^6 |
| 1 A | 24/48 | 0.5×10^6 |
| 2A | 24 | 0.2×10^6 |

| Inductive | | |
|------------------|----------------|-------------------|
| Load | Voltage | Operations |
| 50 VA | 110/220 | 1×10^6 |
| 0.5 A | 24/48 | 1×10^6 |
| 10 VA | 48/220 | 1×10^7 |
| 1 A | 24 | 0.2×10^6 |

| | |
|-----------------------|---|
| Maximum surge current | 30 A |
| Maximum turn-on time | 10 ms |
| Maximum turn-off time | 20 ms |
| I/O status indication | Visual indication provided by communications interface; 1 LED per point |
| Output protection | Yes, see "INSTALLATION CONSIDERATIONS" on page 9. |

Environmental and Physical

| | |
|--|--|
| Operating temperature rating | 0 to 60 °C (32 to 140 °F) |
| Storage temperature rating | -40 to 80 °C (-40 to 176 °F) |
| Humidity rating | 5-95% RH, non-condensing |
| Dimensions (H x W x D): | See Figure 1 |
| Base unit w/ terminal strip | 3.43 x 9.25 x 2.4 in (87 x 235 x 61 mm) |
| Base w/ comms. interface or Base w/ CBS Interface | 3.43 x 9.25 x 2.91 in (87 x 235 x 73.9 mm) |
| Weight (Base unit only) | 1.3 lb (0.6 kg) |

Agency Compliance

Complies with UL508, CSA C22-2 requirements, and FM Class I, Division 2 Hazardous Locations approval requirements.

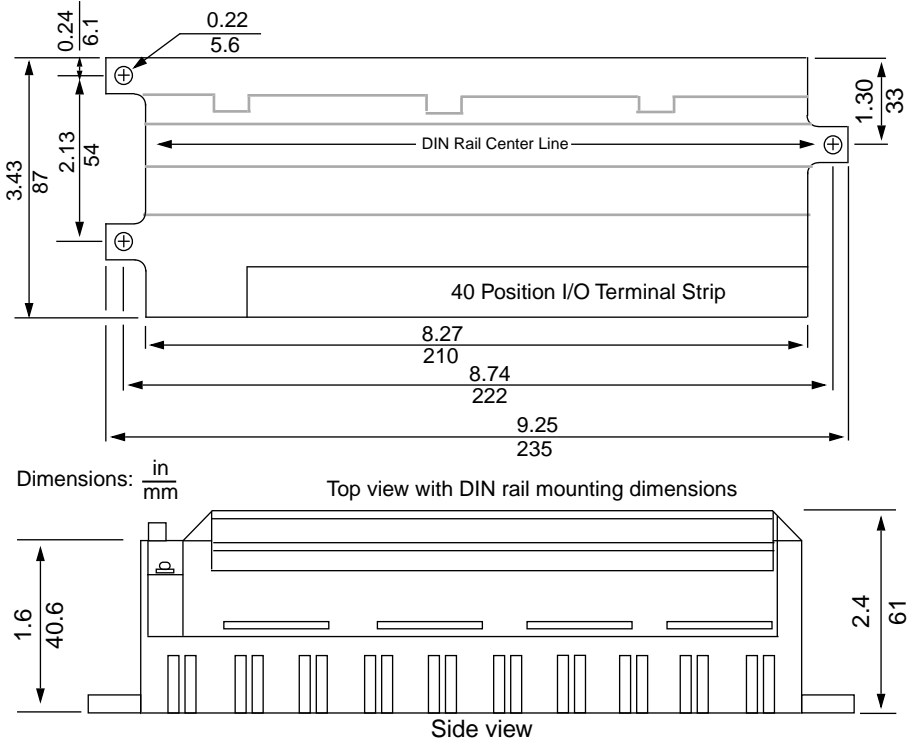


Figure 1: Dimensions

BASE UNIT WIRING

Input and output devices are wired to the terminal strip on the top of the base unit. Figure 2 shows the terminal strip pin-out for the base unit.

Two terminal strip labels are packaged with the base unit. If you are using the base unit with a SY/MAX system, use the terminal strip labels with I/O numbered from 1-16; if you have a Telemecanique system, use the terminal strip labels with I/O numbered from 0-15. These are both illustrated in Figure 2.

The TBX DMS1625 provides separate terminals for base voltage and control output voltage. These terminals may be connected to a common 24 VDC supply or may be sourced by independent supplies (terminals 4 and 1 must be at the same potential).


WARNING

INCORRECT WIRING

The base must be properly grounded before applying power. Equipment **MUST** be grounded using the screw provided.

Do not use metallic conduit as a ground conductor.

Failure to observe these instructions can result in death or serious injury.

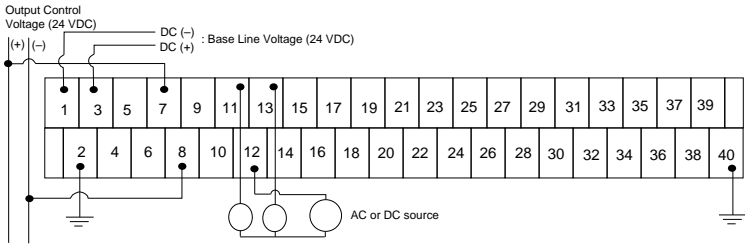

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----|-----|----|----|------|----|----|----|------|----|----|----|------|-----|-----|-----|------|-----|-----|----|------|--|----|--|--------|--|----|--|--------|--|----|--|--------|--|----|--|
| -SV | +SV | NC | I0 | I1 | I2 | I3 | I4 | I5 | I6 | I7 | O8 | O9 | O10 | O11 | O12 | O13 | O14 | O15 | NC | | | | | | | | | | | | | | | | |
| 1 | 3 | 5 | 7 | 9 | 11 | 13 | 15 | 17 | 19 | 21 | 23 | 25 | 27 | 29 | 31 | 33 | 35 | 37 | 39 | | | | | | | | | | | | | | | | |
| 2 | 4 | 6 | 8 | 10 | 12 | 14 | 16 | 18 | 20 | 22 | 24 | 26 | 28 | 30 | 32 | 34 | 36 | 38 | 40 | | | | | | | | | | | | | | | | |
| N1 | | N1 | | C0,1 | | NC | | C2,3 | | NC | | C4,5 | | NC | | C6,7 | | NC | | C8,9 | | NC | | C10,11 | | NC | | C12,13 | | NC | | C14,15 | | NC | |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----|-----|----|----|----|----|--------|----|----|----|--------|----|-----|-----|--------|-----|-----|-----|--------|----|----|--|---------|--|----|--|----------|--|----|--|----------|--|----|--|----------|--|----|--|-----|--|
| VB- | VB+ | NC | I1 | I2 | I3 | I4 | I5 | I6 | I7 | I8 | O9 | O10 | O11 | O12 | O13 | O14 | O15 | O16 | NC | | | | | | | | | | | | | | | | | | | | |
| 1 | 3 | 5 | 7 | 9 | 11 | 13 | 15 | 17 | 19 | 21 | 23 | 25 | 27 | 29 | 31 | 33 | 35 | 37 | 39 | | | | | | | | | | | | | | | | | | | | |
| 2 | 4 | 6 | 8 | 10 | 12 | 14 | 16 | 18 | 20 | 22 | 24 | 26 | 28 | 30 | 32 | 34 | 36 | 38 | 40 | | | | | | | | | | | | | | | | | | | | |
| GND | | NC | | NC | | COM1-2 | | NC | | COM3-4 | | NC | | COM5-6 | | NC | | COM7-8 | | NC | | COM9-10 | | NC | | COM11-12 | | NC | | COM13-14 | | NC | | COM15-16 | | NC | | GND | |

Telemecanique label (0-15)

SY/MAX label (1-16)

Figure 2: TBX DMS1625 Wiring Connections & Terminal Block Signal Assignments

⚠ WARNING

UNINTENTIONAL EQUIPMENT OPERATION

Be sure to use the appropriate SY/MAX or Telemecanique terminal strip label when wiring inputs or outputs. Two terminal strip labels are packaged with the base unit. If you are using the base unit with a SY/MAX system, use the terminal strip label with I/O numbered from 1-16; if you have a Telemecanique system, use the terminal strip label with I/O numbered from 0-15.

Failure to observe these instructions can result in death, serious injury, or equipment damage.

MOUNTING INSTRUCTIONS

The base unit can be mounted horizontally or vertically as shown in Figure 3.

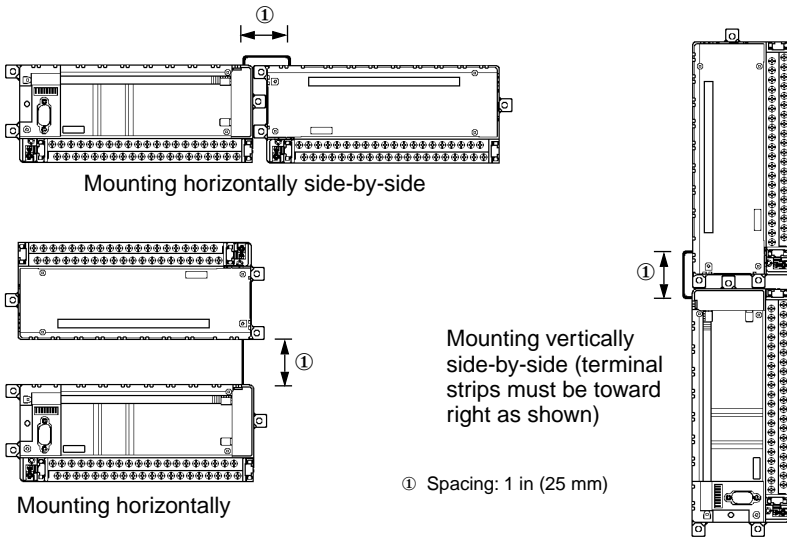


Figure 3: Base Unit Orientation Examples

To mount the base unit on a 35-mm DIN rail:

1. Hook the base unit onto the rail as shown in Figure 4.
2. Press down and toward the DIN rail until the base unit is secure. (There are two spring clips in the top of the groove on the back of the unit.)

To remove the base unit from a DIN rail:

1. Press down on the base unit.
2. Swing the unit outward and lift it off the rail at the same time as pressing down.

NOTE: If the base unit is to be used in a high-vibration environment, mounting the unit on a panel rather than a DIN rail provides more stability. Use cable ties to secure the communication cable.

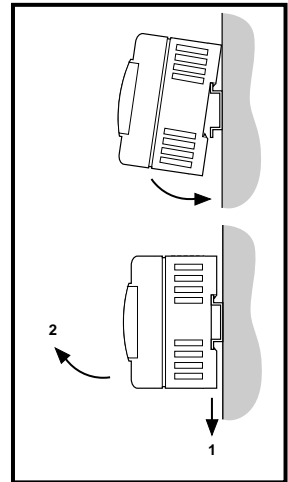


Figure 4: Mounting and Removing the Base Unit

INSTALLATION CONSIDERATIONS

NOTE: The base unit is not compatible with the Type CRM270 interface module.

- *Base Voltage* - The TBX DMS1625 base requires a 24 VDC operating voltage to be applied between terminals 3 and 1.
- *Grounding* - The green ground wire must be connected to the ground screw beside the terminal block.
- *Jumper Wire* - A #16 AWG wire must be installed between terminals 2 and 40.
- *Control Output Power* - Output devices can be powered from a supply other than the one used to provide base voltage. **Note that all power supplies must share the same common.**

The control output voltage supply needs to be connected between terminals 5 and 4. In addition, two jumpers must be installed, one from terminal 5 to 39, and one from terminal 4 to 38.

- *Commons* - The TBX DMS1625 base unit has one common terminal for every two outputs.
- *Fusing* - The base and control power lines must be externally fused by the user.
- *External Wiring* - Each terminal accommodates up to two #16 AWG gauge wires.
- *Freeze State Control* - With TBX Distributed I/O, the user may also have the DRIO set the outputs to a pre-defined state. By defining the output fallback states and enabling the Output Fallback function, the DRIO will now set the outputs to the fallback state when communication with the host PLC is lost. When communications are restored, the outputs will return to normal operation. Refer to the Type CRM275 and TSX manuals.

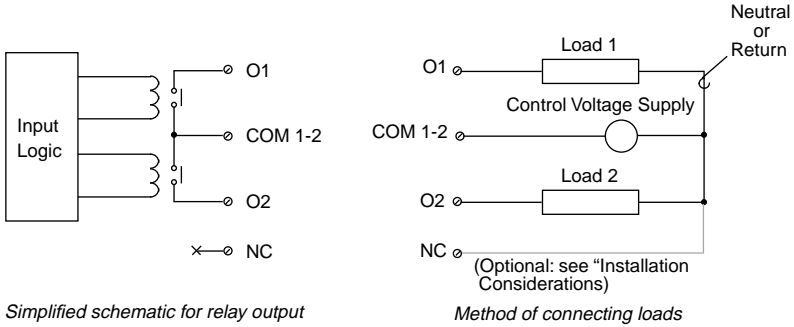


Figure 5: Simplified Schematic and Output Connections for DMS1625 Base Unit

REGISTER USAGE WITH THE SY/MAX CLASS 8030 TYPE CRM275 DRIO MODULE

The TBX DMS1625 base unit supports the assignment of two registers for I/O, diagnostic and configuration registers. Additional information about base unit register usage is contained in the DRIO instruction bulletin (#30598-380).

This base unit supports output fallback state control (Register 4, bits 5-6; Register 6). Refer to Chapter 4 of the DRIO instruction bulletin for more information about register assignments.

| |
|--|
| ⚠ WARNING |
| UNINTENTIONAL EQUIPMENT OPERATION |
| Do not use reserved registers and bits in PLC programs. Erratic operation may result. |
| Failure to observe this instruction can result in death, serious injury, or equipment damage. |



GROUPE SCHNEIDER

■ Merlin Gerin ■ Square D ■ Telemecanique

30598-376-01B1 July 1997 Printed in USA DLC

© 1997 Square D All Rights Reserved